





Moth



Fog



Aqua



Meadow



Rust



Seafoam



Stream



Steel



Spa



Mint



Fox



Aegean



Rain



Gray



Moss



Ocean



Popsicle




Cobalt



Smoke



Dusk

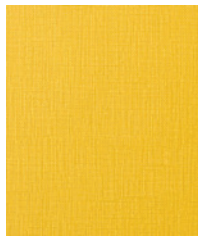

Sunshine



Grotto



Eggplant



Marlin



Charcoal



Pigeon

Product Specifications

Construction	Values	Test Method
Surface Composition	100% Polycarbonate	
Backing Composition	50% Rayon, 50% Polyester	ASTM D 751-89
Finished Width	54" min.	ASTM D 751-89
Put-up	30 yards	
Repeat	None	
Cleaning Code	W/S	
Railroaded	No	

Performance	Minimum Values	Test Method
Adhesion	4 lbs. × 4 lbs.	ASTM D 751-89
Breaking Strength	80 lbs. × 60 lbs.	ASTM D 751-89
Trap Tear	15 lbs. × 15 lbs.	ASTM D 751-89
Seam Strength	40 lbs. × 40 lbs.	ASTM D 751-89
Stretch at 15# MD (warp) × CD (fill)	8% × 12%	ASTM D 5034-09
Flex Resistance	25,000 cycles	ASTM D 2097-91
Blocking	No. 1 - PASS	FTMS 191A, 5872
Seam Slippage	25 lbs. × 25 lbs.	ASTM D 4034
Crock Resistance	Dry-4; Wet-4	AATCC 8-2001
Wyzenbeek Abrasion	300,000 cycles, #10 Cotton Duck	ASTM D 4157-07
Hydrolysis Resistance	24-weeks	ISO 1419: 1995
UV Stability	1000 hours	AATCC 16-2004
Cold Crack (5# roller)	-20°F	CFFA-6A

Suitable Applications Contract, Healthcare, Hospitality, Residential

Cleaning and Disinfecting

Remove ordinary dirt and smudges with mild soap and water. A 50:1 ratio of water to bleach solution may be used as a disinfectant. Rinse the surface with clean water after disinfecting. Dry with a soft, lint-free cloth or towel. We recommend that you use Clorox Healthcare and Clorox Pro products to disinfect Mitchell products in commercial settings.



The Mitchell Group is a compatibility partner with Clorox Healthcare

The Mitchell Group
7040 N. Austin Avenue | Niles, IL 60714
847.647.7300 | mitchellfauxleathers.com

