






Aegean

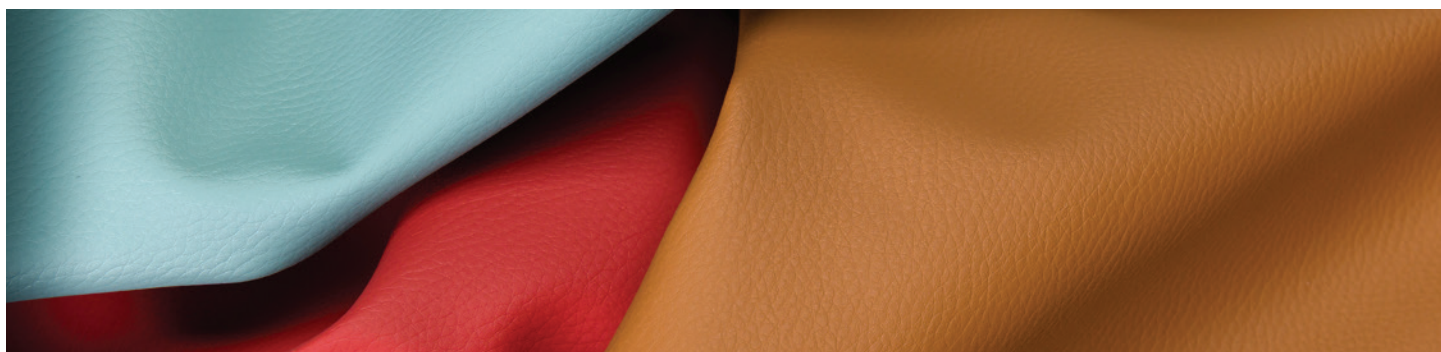


Alloy

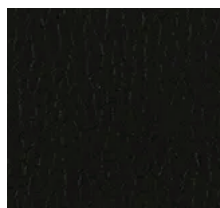

Black

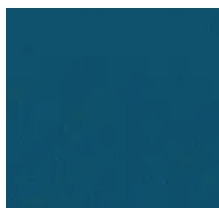

Canal

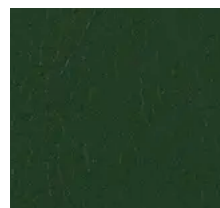

Canopy




Caramel



Cobalt




Depth

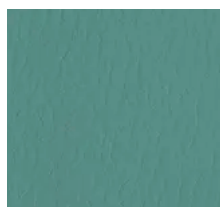


Drift




Driftwood

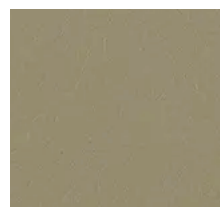

Dune

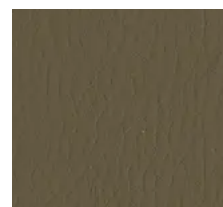


Earthbound

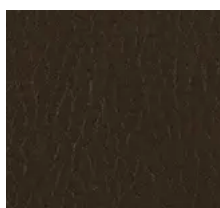


Espresso



Fjord

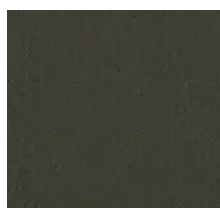

Graphite

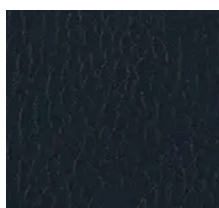

Inkwell




Ivory



Khaki




Mandarin

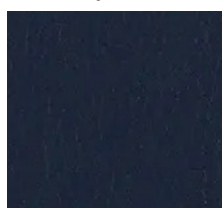

Midnight




Paprika

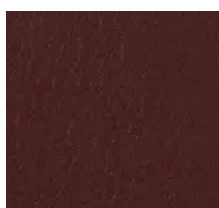


Plum




Ruby

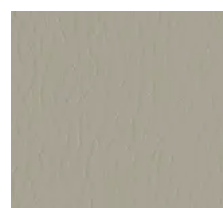

Sandstone

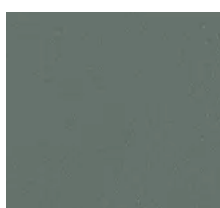

Shadow

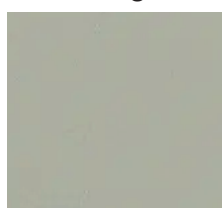


Silver



Spearmint




Sprout

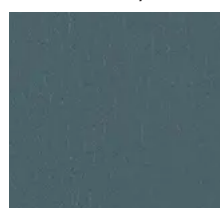

Steel



Verbena

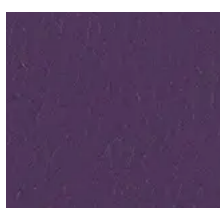

Violet

Construction

Construction	Values	Test Method
Surface Composition	100% Silicone	
Backing Composition	100% Global Recycled Standard Polyester	ASTM D 751-06
Finished Width	54" min.	ASTM D 751-06
Repeat	None	
Railroaded	No	
Put-up	25 yards	
Cleaning Code	W/S	

Performance

Performance	Values	Test Method
Grab Tensile	100 lbs./in. × 160 lbs./in. min.	ASTM D 751-06
Trap Tear	25 lbs./in. × 25 lbs./in. min.	ASTM D 751-06
Seam Strength	40 lbs./in. × 60 lbs./in. min.	ASTM D 751-06
Adhesion	4 lbs./in. × 4 lbs./in. min.	ASTM D 751-06
Stretch @ 15# (MD×CD)	8% × 24%	ASTM D 751-06
Set	2.5% × 3.0%	ASTM D 751-06
Flex Resistance	25,000 Cycles	ASTM D 2097
Blocking	No. 1 – Pass	FTMS 191A-TM5872
Crock Resistance	Wet – 4.5	AATCC 8-2016
Wyzenbeek Abrasion	100,000 cycles, #10 cotton duck	ASTM D 4157-13
Colorfastness to Light	200 hours	ASTM D 4329-05
Cold Crack (Roller Method)	-40°F	CFFA-6A

Flammability

California Technical Bulletin 117-2013, Sec. 1	Pass
--	------

Environmental

1. No solvents, pvc, plasticizers, phthalates, stabilizers, heavy metals or Bisphenol A
2. No persistent organic pollutants. No formaldehyde. No toxic by-products.
3. No chemical flame retardants
4. RoHS, REACH and LEED compliant
5. Passes CA 01350 VOC Emissions test

Suitable Applications

Automotive, Contract, Healthcare, Hospitality

Cleaning and Disinfecting

Remove ordinary dirt and smudges with mild soap and water. A 10:1 ratio of water to bleach solution may be used as a disinfectant. Rinse the surface with clean water after disinfecting. Dry with a soft, lint-free cloth or towel. We recommend that you use Clorox Healthcare and Clorox Pro products to disinfect Mitchell products in commercial settings.



The Mitchell Group is a compatibility partner with Clorox Healthcare



The Mitchell Group
7040 N. Austin Avenue | Niles, IL 60714
847.647.7300 | mitchellfauxleathers.com