



Abite




Bagel

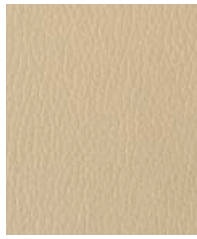

Sea Mist

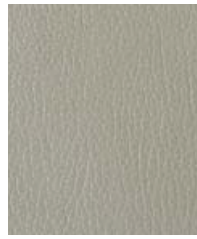

Ash

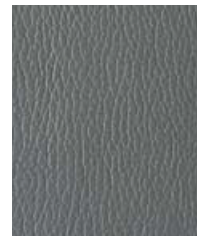


Fathom




Juice Box



Black

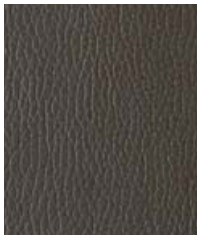

Chocolate

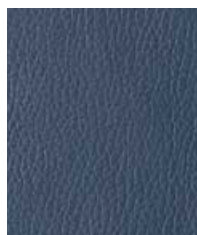

Blueberry

**Technical Specifications**

	Values	Test Method
Surface Composition	100% Polyurethane	
Backing Composition	100% Polyester	ASTM D 751-89
Finished Width	54" min.	ASTM D 751-89
Repeat	None	
Railroaded	No	
Put-up	30 yards	
Cleaning Code	W/S	

**Performance**

	Minimum Values	Test Method
Grab Tensile	80 lbs./in. x 70 lbs./in. min.	ASTM D 5034-09
Trap Tear	15 lbs./in. x 15 lbs./in. min.	ASTM D 5587-07
Seam Strength	60 lbs./in. x 60 lbs./in. min.	ASTM D 1683-07A
Adhesion	4 lbs./in. x 4 lbs./in. min.	ASTM D 751-89
Stretch @ 15# (MDxCD)	2 % x7%	ASTM D 751-89
Flex Resistance	50,000 cycles	ASTM D 2097-03
Blocking	No. 1 - Pass	Fed. Std. 191 A , 5872
Crock Resistance	Dry-4; Wet-4	AATCC 8-2013
Wyzenbeek Abrasion	100,000 cycles, #10 Cotton Duck	ASTM D 4157-07
Hydrolysis Resistance	10 weeks	ISO 1419: 1995 E
UV Stability	200 hours	AATCC 16-2004
Blue Dye Transfer Resistance	Dry-4-5; Wet-4-5	LP-463KC-04-03
Anti-Bacterial	No growth	AATCC 147-2004
Mildew Resistance	No growth	ASTM G-21

**Flammability**

California Technical Bulletin 117-2013, Sec. 1	Pass
IMO A.652(16)8.2	Pass
U.F.A.C. Class I	Pass
NFPA 260	Pass

**Environmental**

Does not contain PFAS, PFOA, or formaldehyde

**Suitable Applications:** Hospitality, Contract, Healthcare, Residential

**Cleaning and Disinfecting**

Remove ordinary dirt and smudges with mild soap and water. A 10:1 ratio of water to bleach solution may be used as a disinfectant. Rinse the surface with clean water after disinfecting. Dry with a soft, lint-free cloth or towel. We recommend that you use Clorox Healthcare products VersaSure wipes and Hydrogen Peroxide wipes to disinfect Sta-Kleen Performance products in commercial settings.



Sta-Kleen Performance is a compatibility partner with Clorox Healthcare.

